

## Analog Transmitter

# SIGNAL 4.0



## OVERVIEW

### Operation

- The position of a magnetic float / piston is detected by means of Hall sensors and converted into an analog signal.

### Application

- Use in combination with float-type sensors for various flow media (see table on page 2)
- Industry 4.0

### Features

- Analog output (4-20 mA and 0-10 V)

### Installation information

- Refer also to the applicable data sheets and operating instructions for the flow monitor!
- **Download: [www.meister-flow.com](http://www.meister-flow.com)**

## OPERATING DATA

<b>Accuracy</b>	± 1 % <sup>(1)</sup>
<b>Operating temperature</b>	-20 °C - 70 °C
<b>Storage temperature</b>	-20 °C - 70 °C
<b>Repeatability</b>	tbd.

<sup>(1)</sup>The actual accuracy depends on the flow sensor used. On request the accuracy of the flow sensor used can be significantly increased by a customized calibration.

## MATERIALS



### Non-wetted parts

Housing:	Aluminium, blue anodized (optional: 1.4571)
----------	--

## COMBINATIONS

Type		
Sensor	Transmitter	Combination
DUM	+ SIGNAL 4.0	= DUM/SIGNAL 4.0
DUM/A	+ SIGNAL 4.0	= DUM/A/SIGNAL 4.0
DWM	+ SIGNAL 4.0	= DWM/SIGNAL 4.0
DWM/A	+ SIGNAL 4.0	= DWM/A/SIGNAL 4.0
RVM/U-1	+ SIGNAL 4.0	= RVM/U-1/SIGNAL 4.0
RVM/UA-1	+ SIGNAL 4.0	= RVM/UA-1/SIGNAL 4.0
RVM/U-2	+ SIGNAL 4.0	= RVM/U-2/SIGNAL 4.0
RVM/UA-2	+ SIGNAL 4.0	= RVM/UA-2/SIGNAL 4.0
RVM/U-4	+ SIGNAL 4.0	= RVM/U-4/SIGNAL 4.0
WY	+ SIGNAL 4.0	= WY/SIGNAL 4.0
DKM-1	+ SIGNAL 4.0	= DKM-1/SIGNAL 4.0
DKM/A-1	+ SIGNAL 4.0	= DKM/A-1/SIGNAL 4.0
DKM-2	+ SIGNAL 4.0	= DKM-2/SIGNAL 4.0
DKM/A-2	+ SIGNAL 4.0	= DKM/A-2/SIGNAL 4.0
DKME-1	+ SIGNAL 4.0	= DKME-1/SIGNAL 4.0
DKME/A-1	+ SIGNAL 4.0	= DKME/A-1/SIGNAL 4.0
DWM-L	+ SIGNAL 4.0	= DWM-L/SIGNAL 4.0
DWM/A-L	+ SIGNAL 4.0	= DWM/A-L/SIGNAL 4.0
RVM/U-L1	+ SIGNAL 4.0	= RVM/U-L1/SIGNAL 4.0
RVM/U-L2	+ SIGNAL 4.0	= RVM/U-L2/SIGNAL 4.0
RVM/U-L4	+ SIGNAL 4.0	= RVM/U-L4/SIGNAL 4.0
RVM/UA-L1	+ SIGNAL 4.0	= RVM/UA-L1/ SIGNAL 4.0
RVM/UA-L2	+ SIGNAL 4.0	= RVM/UA-L2/ SIGNAL 4.0

## TECHNICAL DRAWING

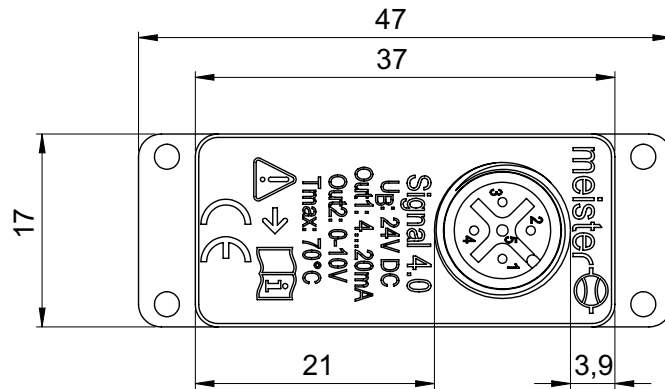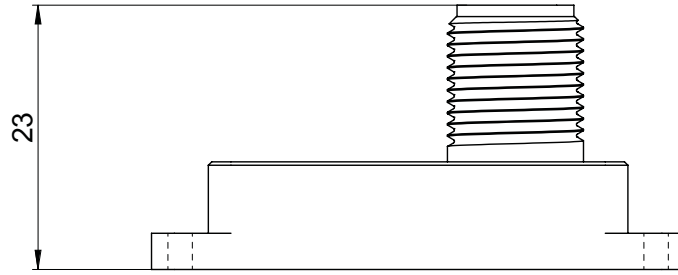

## CONNECTION DIAGRAM




### Attention:

Pin 5 must not be electrically connected! We strongly recommend use of a four core cable.

The SIGNAL 4.0 must not be removed from the basic unit. In case of a removal a loss of warranty is possible.


# CHARACTERISTICS

## Current-Flow characteristic

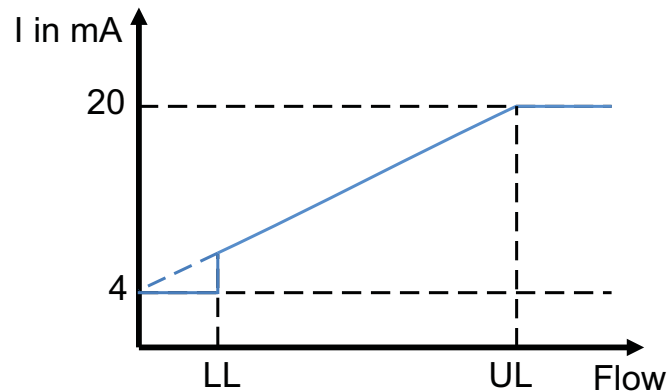

LL: lower limit of measuring range  
UL: upper limit of measuring range

## Voltage-Flow characteristic

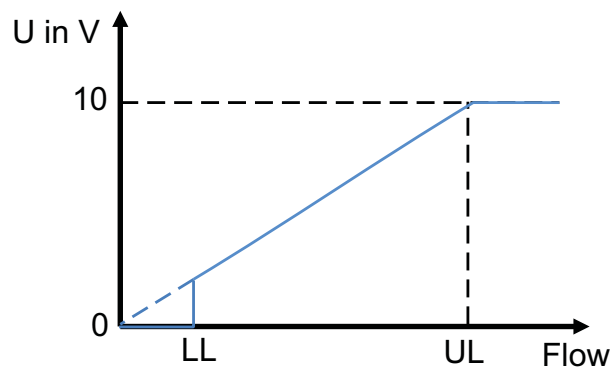

LL: lower limit of measuring range  
UL: upper limit of measuring range

# ELECTRICAL DATA

## Analog output

4...20 mA and 0...10 V

## Power supply

24 VDC (19...30 VDC)

## Power consumption

< 1 W

## Current output

Max. load 600  $\Omega$

## Voltage output

0-10 V at max. 10 mA current consumption

## Connection

For round plug M12x1, 5 pin

## Ingress Protection

IP 65

IP 67

## Notes

Please note that the flowmeter and the SIGNAL 4.0 analog transmitter have been optimally adjusted to each other and may not be exchanged!

Please also refer to the data sheets and operating instructions of the respective flowmeter!